



User Manual

VXM143U

Please read this manual carefully for proper usage before Installation and use. It is recommended to keep this manual for future check.

The pictures in this manual are only for reference.

1. Packing list

1. The TV set.
2. Quick start guide.
3. Remote control.
4. Power cord (or attached to TV set).
5. Base assembly.

2. Safety Warning and Notice

Thank you for choosing the Voxicon LED TV, a high quality product with multiple functions. All machines are strictly tested, but incorrect use may cause malfunctions such as electric shocks or fire. In order to ensure safety and to extend the product life-span, please read the manual carefully before using it and comply with the following safety instructions. Please keep the user manual for later use.



Attention

May result in personal injury or property loss



Warning

May result in casualties



Indicate the behaviors that must be prohibited

2.1 Under following conditions




If the following conditions occur, turn off the TV set immediately. Unplug the power cord from the power outlet and contact authorized maintenance personnel:

- Power failure or unstable voltage
- Abnormal sound or smell from the device
- AC power cord is damaged
- TV set is damaged due to falling off, knock or impact
- Any liquid or foreign matters enter into the TV set

Turn off the TV set immediately, unplug the power cord from the power outlet.



Warning

- Only use 100-240VAC, 60/50Hz power supply
- All cables can be connected or pulled out only after power supply is turned off
- Do not fix the TV set in an instable position or else it may fall, be damaged or catch on fire
- Do not put the TV set in the environment:
 1. With direct sunshine, moisture, overheating, undercooling or heavy dust
 2. With flammable or explosive substance
 3. With flammable or corrosive gas
 4. In bathroom, kitchen, etc.
- Do not use damaged or improper power socket, and ensure that the plug and socket are connected properly
- Keep the power plug and socket free of dust and metal pieces
- Do not damage the power cord:
 1. It is prohibited to refit the power cord
 2. Do not put heavy object on the power cord
 3. Keep the power cord away from heat source
 4. Do not drag the power cord when unplugging
- Do not connect too many appliances to one power strip, or else it may cause fire due to high power consumption.
- Do not let open flame (e.g. lit candle) approach the TV set, or else it may cause electric shock or fire
- Do not put a container filled with water on the TV set, to avoid electric shock or fire caused by water drop of splashing
- Do not penetrate any sharp object, metal or liquid into the signal connector or air vents, to avoid short circuit and product damage as well as electric shock
- The slots on the case is designed to release heat so as to assure that all inside components will not reach an extra high temperature and can work normally for a long time. Please do not cover the holes while place it
-  Do not touch the plug with wet hands, or else it may cause electric shock
-  Do not turn on the TV set in thunderstorm weather, instead, unplug the power plug and antenna connector to avoid lightning strike
-  Do not disassemble the TV set by yourself, or else it may cause electric shock or fire. Contact qualified personnel for maintenance



Attention

- Do not let children climb onto the TV set.
- Keep the small accessories away from children's reach to avoid swallowing
- If the TV set will not be used for a long time, please turn off the device and unplug the power cord
- Before cleaning the TV set, unplug the power cord and keep the power plug and socket free of dust and metal pieces wipe with soft cloth; do not use chemical reagents and avoid foreign substances entering into the device. Incorrect cleaning jsuch as cleaning fluid, water, etc) may lead to damage of product's appearance, erasing products printing information, even flow into the machine and damage components, cause machine can not display
- To adjust the position or angle of the TV set, please disconnect all wires and move slowly to avoid falling off
- Do not rub with hard object, knock, bend or squeeze the screen
- Do not use machine immediately after transferring machine lo the places with high temperature from low temperature, which will cause fogging inside machine
- If the screen is broken and the liquid splashes on skin, please wash with clean water immediately for 15 minutes, and go to see your doctor
- To carry the TV set with hands, please grasp the corners and hold the bottom; do not apply force on the panel
- Displaying the same image for a long time or active image with fixed words, icons will leave "image persistence" on screen which will not disappear after powering off for a long time. This undesirable phenomenon is not covered by warranty
- Healthy TV watching:
 1. Watch in appropriate light; poor light or long time watching may hurt your eyes
 2. Adjust the volume appropriate to avoid hurting your hearing
- Unplug the power cord of the device to cut off the power supply
- If a power plug or appliance coupler is used as disconnecting device, it should ensure easy operation
- Power plug shall be connected reliably. Loose power plugs may cause sparkle and fire
- All the technical specifications in the user manual and on the packaging are subject to changes without prior notice. If there is slight deviation between the user manual and actual operation, the latter shall prevail

3. How to mount the TV set


3.1 Tips on installation

- The TV set should be mounted near the AC power socket for easy plugging and unplugging
- For your safety, please select appropriate wall mount bracket or base
- To avoid damages, it is required to place the TV set on stable plane, or fixed on firm wall
- Ask qualified personnel to mount the TV set on the wall. Improper mounting may result in instable TV set
- Do not place the TV set at any place susceptible to mechanical vibration
- Do not mount the TV set against air conditioner, or else the internal panel of the display may condense moisture and cause failure
- Do not place the TV set at any place with strong magnetic field, or else it may be interfered with and damaged by electromagnetic wave


3.2 Ventilation

- Please keep this space at least around the TV, as shown in the figure
- Do not cover the air vents or insert any object into the enclosure.
- Do not put the device in limited space, e.g. bookcase or embedded closet, unless the TV set is properly ventilated

Mount on the base:

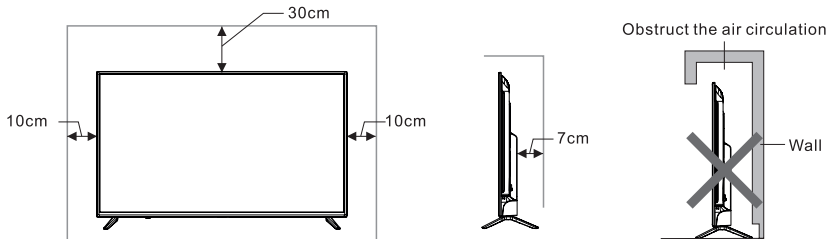

Mount on the wall:

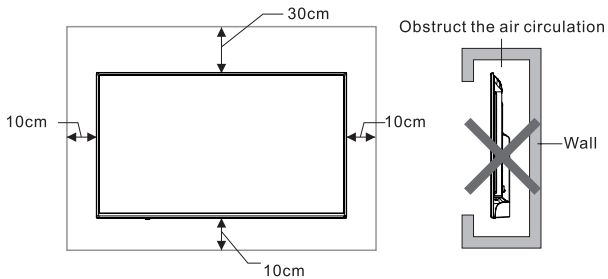

Warning

 
Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set
- Only using furniture that can safely support the television set supporting furniture
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.

4. Antenna connection

- Make sure the power supply is turned off before connecting or pulling out any cable
- If you would like to know more about the device connection diagram, please refer to the User's Manual
- The picture is only for reference, please refer to the actual

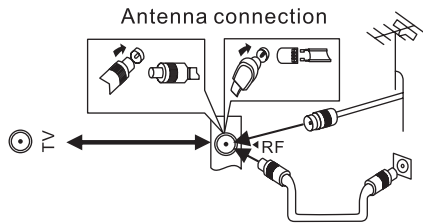

Warning

When connecting outdoor antenna to signal port of the TV set, please turn off the main power switch of the TV set first. Do not approach the outdoor antenna to high voltage mains power line to avoid electric shock. The wired network antenna connected to this TV set must be isolated from the protective grounding, or else it will cause fire or other hazards.

5. Remote Control


5.1 Installing battery

Remove the battery cover, and insert two AAA (1.5V) batteries; make sure that the polarity of the battery is consistent with the marks "+/-" in the battery slot.

5.1 Precautions of remote control usage

- Point the remote control to the receiver window. The objects between remote control and the receiver window may disturb the normal operation
- Keep the remote control away from strong vibration. In addition, do not set or put the remote control in direct sunshine, which may result in deformation of the remote control
- The remote control may be invalid if the receiver window is in direct sunshine or strong light; in this case, please adjust the angle of the light or the device, or approach the remote control to the receiver window
- The effective range of the remote control may be affected if the battery voltage is low; in this case, please replace with a new battery; if the remote control won't be used or battery voltage is too low, please take out the battery to avoid corrosion due to battery liquid leakage
- Do not mix different types of batteries, or used and new batteries
- Do not throw the batteries into fire, charge or break up, or charge, short circuit, disassemble, heat or burn the used batteries. Please follow the environmental protection regulations to disposal of the batteries

6. Turning on/Standby

Before power-on platform, please make sure that the power supply is stable. Insert the power plug into the outlet. Press "O" button on the TV (If it doesn't have this button, you needn't operate this step), then press  key to turn on the TV.

When the TV is working, pressing  key, the TV will enter standby mode

Special note:

This device adopts energy saving technology:



















- If there is no signal input in power on state, the TV set enters standby state automatically after five minutes
- When the schedule power off time is reached, the TV set enters standby state automatically




7. User's manual

Special note:

This device adopts energy saving technology:

- This manual is a quick guide. Ask for more detailed operations, please refer to the "User's Manual"
 - The following keys operation use remote control.
1. Press  key to show the home page
 2. Press  /  /  /  key to select **All Apps**
 3. press **OK** key to confirm
 4. Press  /  /  /  key to select **User's Manual**
 5. Press **OK** key to enter **User's Manual**
 6. Press  /  key to select read mode
 7. Press **OK** key to confirm
 8. Press  /  to select directories
 9. Press **OK** key to confirm
 10. Press  key to enter the selected page
 11. Press  /  key to select page up/down
 12. Press  key to return back the directories
 13. Press  key to exit User's Manual.


8. Troubleshooting

Snowflake spots occur in the TV images and there is noise in accompanying sound	<ol style="list-style-type: none"> 1. Check if the antenna plug is loose or the cable is in good condition 2. Check the antenna type (VHF/UHF) 3. Adjust the direction and position of the antenna 4. Try to use signal enhancer
There is neither display nor sound on the screen. The indication light is not on	<p>Check the power line is connected</p> <p>Press the  button on the panel</p>
Dotted line or strip disturbance occurs in TV Images	Do not use electric hair dryer aside the TV set and adjust the antenna direction to reduce disturbance
Double images occur on the TV screen	<ol style="list-style-type: none"> 1. Use high oriented antenna 2. Adjust the direction of the antenna
The images are colorless	Enter "Picture" setting to increase color saturation
The TV has no accompanying sound	<ol style="list-style-type: none"> 1. Adjust the volume to a proper degree. 2. Press MUTE key on the remote control to cancel mute mode
No signal input images show on the machine screen. The Indicator light is blinking	<ol style="list-style-type: none"> 1. Check if the signal connecting cable is loose or falls off. Reconnect it. 2. The computer may be in standby mode, please reboot.

Images displayed on the PC deviate. The screen is not full or is exceeded. The display is fuzzy	<ol style="list-style-type: none"> 1. Use automatic adjustment function 2. Enter "PC Image Mode" adjustment level or vertical position 3. Use the recommended mode.
The remote control distance is short or out of control	<ol style="list-style-type: none"> 1. Remove the object to avoid blocking the remote control receiving window 2. Replace the battery
The browser cannot access any link	<ol style="list-style-type: none"> 1. Ask the network administrator to obtain available IP address and other parameters 2. Check if the network connecting cable is normally connected 3. Consult the network service provider
Online video play is very slow	<ol style="list-style-type: none"> 1. Please upgrade your network bandwidth to a higher one 2. Please try to replace with other addresses to obtain better resources
The images are colorless	Enter "Picture" setting to increase color saturation
Machine is slow, system crash, can not operate the machine	Disconnect the power supply first, and connect the power supply after about 1-2 minutes, then turn on the TV again

9. Base Installation Instructions

 - Put machine flat first, distinguish left and right base and base installation front and back direction
- Install base in bottom of machine back cover as arrow direction in figure
- Align positioning hole/column of top base and positioning column/hole of bottom of machine back cover
- Align screw holes, then fasten screws (notice that base module has to be adjusted at figure status, otherwise it cannot be installed in)

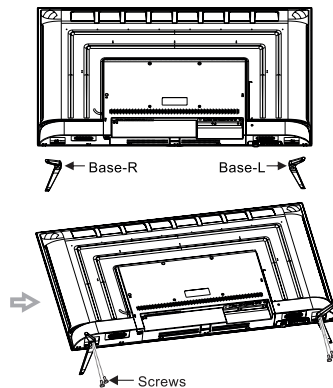

10. Marking

Declares that the design and manufacturing of this product complies with the European directives for CE-marking as stated below:

2014/35/EU (LVD)

2014/30/EU (EMC)

2011/65/EU (RoHS)

2017/53/EU (RED)